


Installation tip for 670400 and 670440 support leg:

1. Position leg flat to back of housing.
2. Press split-end retaining pin through leg AND housing.
3. Press locking pin through hole to secure.

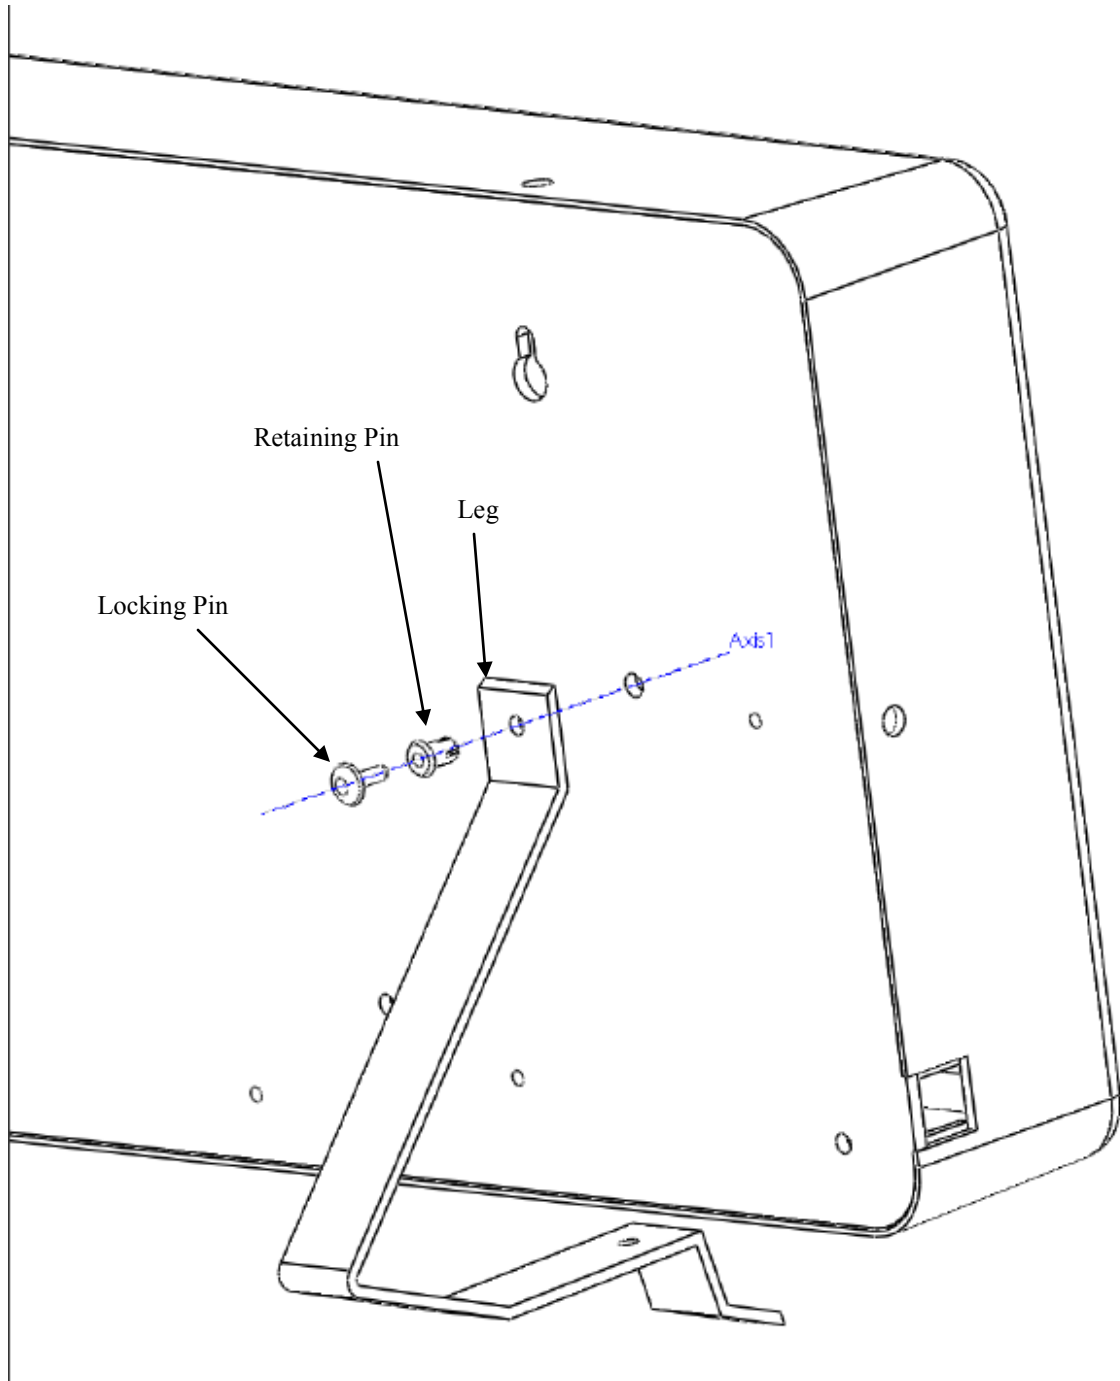

Important Note: Retaining PIN must be inserted THROUGH LEG.